




USB to UART

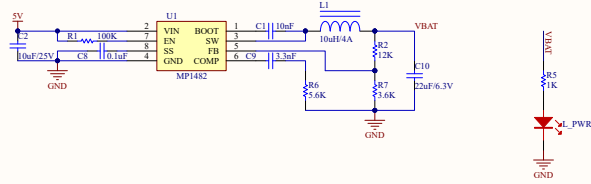

Power

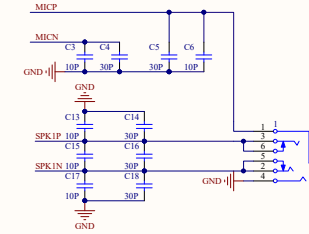

 
earphone



UART JMP




PWRKEY

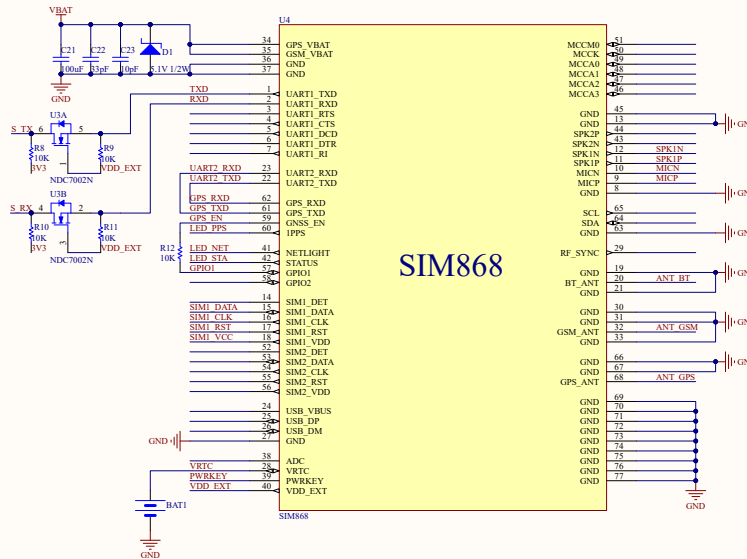

SIM868

 
SIM868



BT ANT




 GSM ANT



GPS ANT

Antenna

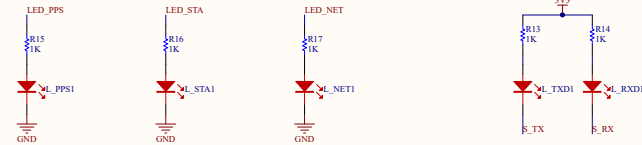


PPS

STA

NET

UART LED

Indicator light

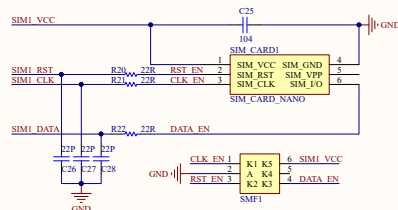

SIM_CAR

BCM	wPi	P2	wPi	BCM
2	8	P2.SDA	1	2
3	9	P2.SCL	3	4
4	7	P2	5	6
17	0	P17	7	8
27	2	P27	9	10
22	3	P22	11	12
10	12	P10	13	14
9	13	P9	15	16
11	14	P11	17	18
5	21	P5	19	20
6	22	P6	21	22
13	23	P13	23	24
19	24	P19	25	26
26	25	P26	27	28
		GND	29	30
		GND	31	32
		GND	33	34
		GND	35	36
		GND	37	38
		GND	39	40

Raspberry Interface

GSM/GPRS/GNSS HAT